


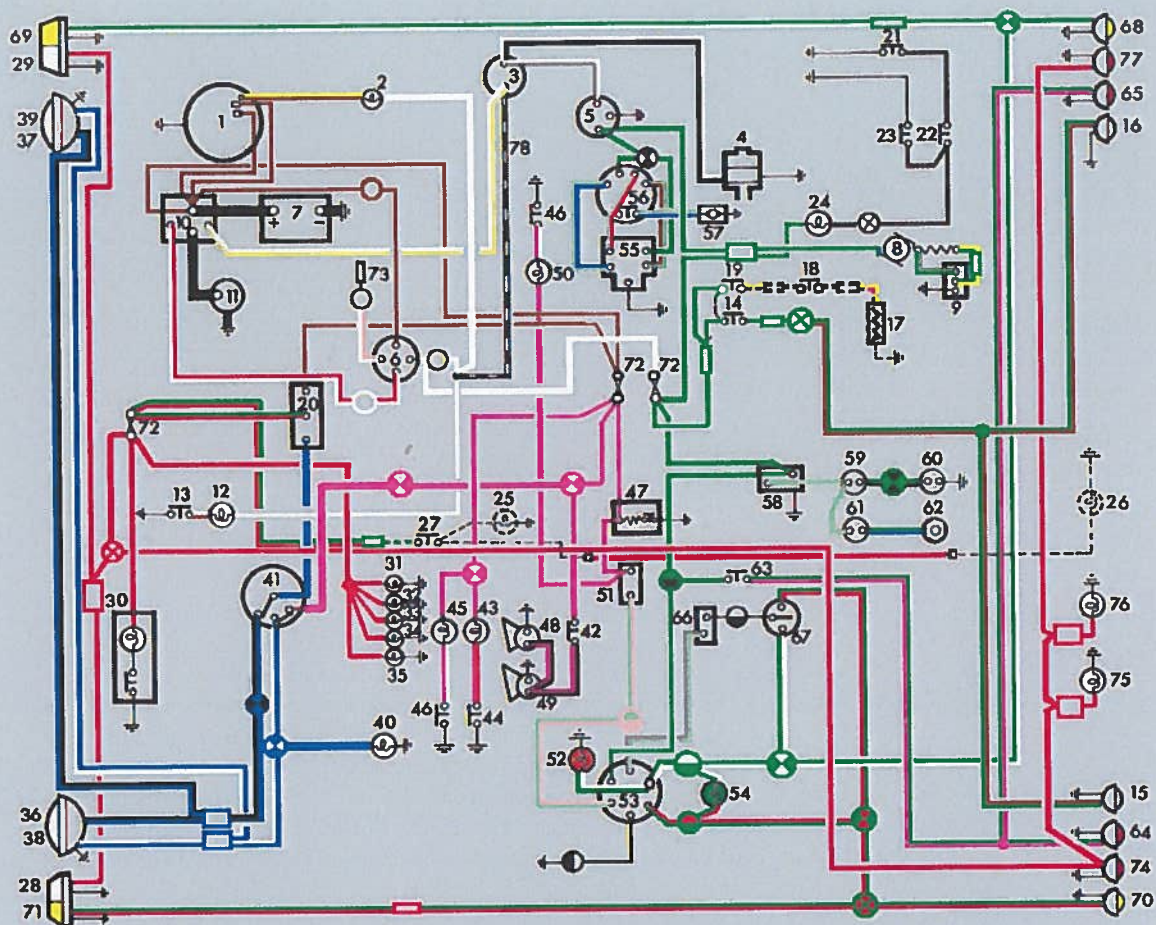

Key to wiring diagram for RHD Spitfire 1500 from commission number FH100020

- | | | |
|-------------------------------|--------------------------------------|----------------------------|
| 1 Alternator | 27 Rear fog light switch | 33 Hazard warning switch |
| 2 Ignition warning light | 28 LH sidelamp | 34 Indicator warning light |
| 3 Ignition coil | 29 RH sidelamp | 35 Two-speed wiper motor |
| 4 Distributor | 30 Map light | 36 Two-speed wiper switch |
| 5 Tachometer | 31 Fuel gauge illumination | 37 Screen washer motor |
| 6 Ignition switch | 32 Temperature gauge illumination | 38 Voltage stabiliser |
| 7 Battery | 33 Speedometer illumination | 39 Fuel gauge |
| 8 Two-speed heater motor | 34 Tachometer illumination | 40 Tank gauge |
| 9 Two-speed heater switch | 35 Cigar lighter illumination | 41 Temperature gauge |
| 10 Starter solenoid | 36 LH dip beam | 42 Temperature sender unit |
| 11 Starter motor | 37 RH dip beam | 43 Brake lamp switch |
| 12 Oil pressure warning light | 38 LH main beam | 44 LH brake lamp |
| 13 Oil pressure switch | 39 RH main beam | 45 RH brake lamp |
| 14 Reverse lamp switch | 40 Main beam warning light | 46 Flasher unit |
| 15 LH reverse lamp | 41 Main, dip beam and flasher switch | 47 Indicator switch |
| 16 RH reverse lamp | 42 Horn push | 48 RH rear indicator lamp |
| 17 Overdrive solenoid | 43 Boot lamp | 49 RH front indicator lamp |
| 18 Overdrive in-out switch | 44 Boot lamp switch | 50 LH rear indicator lamp |
| 19 Gearbox inhibitor switch | 45 LH interior light | 51 LH front indicator lamp |
| 20 Headlamp switch | 46 Door switch | 52 Fuses |
| 21 LH seat switch | 47 Cigar lighter | 53 Radio supply |
| 22 LH belt switch | 48 RH horn | 54 LH tail lamp |
| 23 RH belt switch | 49 LH horn | 55 LH number plate lamp |
| 24 Seat belt warning light | 50 RH interior light | 56 RH number plate lamp |
| 25 Rear fog warning light | 51 Hazard flasher unit | 57 RH tail lamp |
| 26 Rear fog light | 52 Hazard warning light | 58 Ballast resistor wire |