

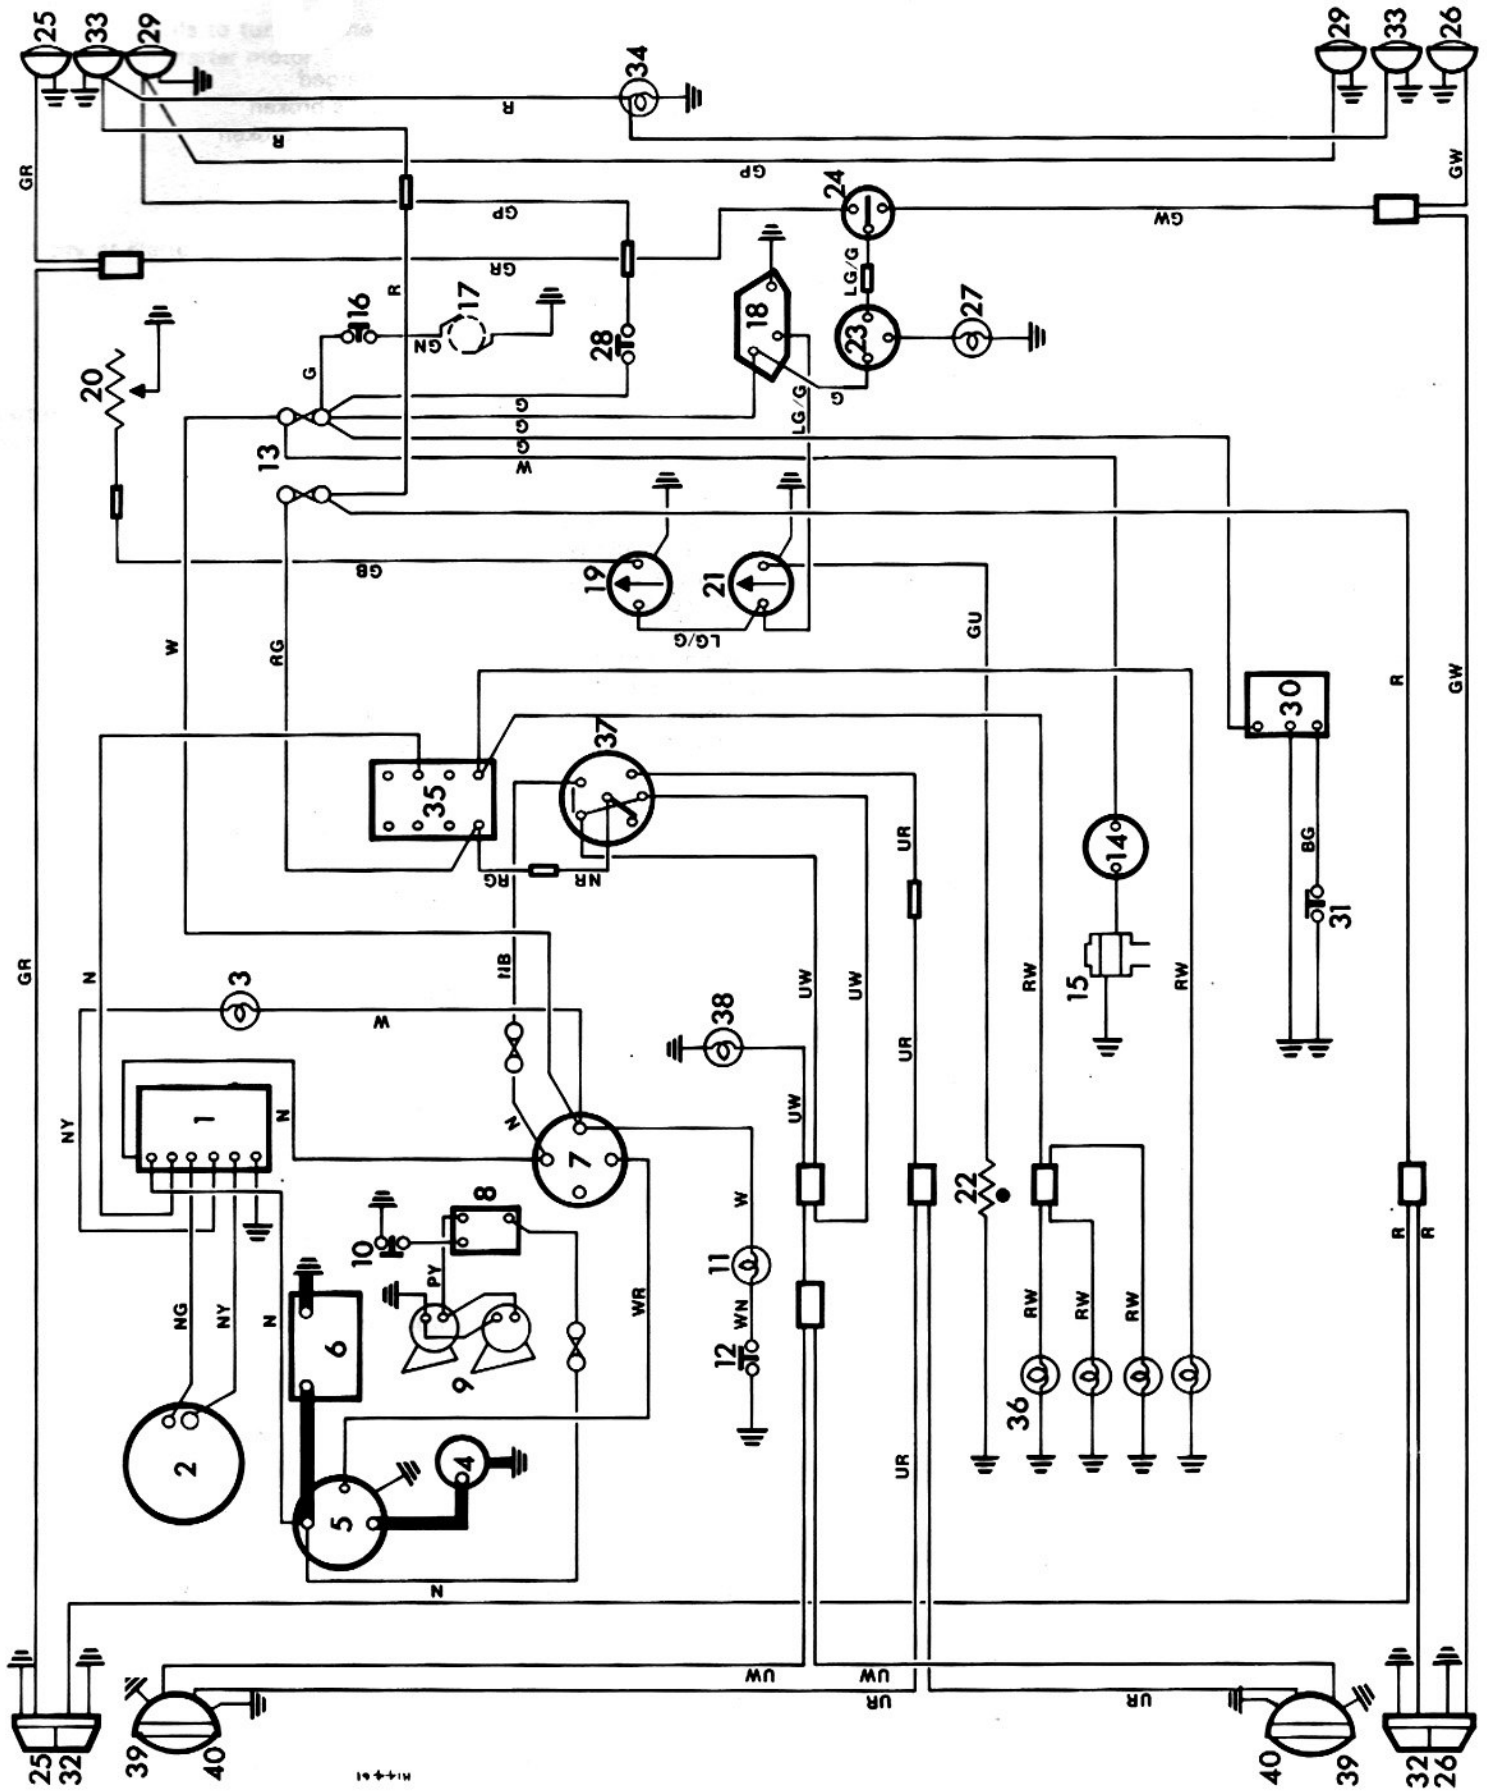


Fig. 10.53 Wiring diagram for Spitfire Mk I and II

Key to wiring diagram for Spitfire Mk I and II

- | | | |
|---------------------------|-------------------------|---------------------------------|
| 1 Control box | 15 Distributor | 28 Brake/stop lamp switch |
| 2 Generator | 16 Heater blower switch | 29 Brake/stop lamps |
| 3 Ignition warning lamp | 17 Heater blower motor* | 30 Wiper motor |
| 4 Starter motor | 18 Voltage stabiliser | 31 Wiper motor switch |
| 5 Starter solenoid | 19 Fuel gauge | 32 Front parking lamps |
| 6 Battery | 20 Fuel tank unit | 33 Rear lamps |
| 7 Ignition/starter switch | 21 Temperature gauge | 34 Plate illumination lamps |
| 8 Horn fuse | 22 Temperature sender | 35 Lighting switch |
| 9 Horns | 23 Flasher unit | 36 Instrument lighting |
| 10 Horn push | 24 Turn signal switch | 37 Steering column light switch |
| 11 Oil warning lamp | 25 LH indicator lamps | 38 Main beam warning lamp |
| 12 Oil pressure switch | 26 RH indicator lamps | 39 Headlamp main beams |
| 13 Fuse unit | 27 Indicator monitor | 40 Headlamp dipped beams |
| 14 Ignition coil | | |

*Special accessory

Wire colour codes

B	Black	M	Medium	S	Slate
D	Dark	N	Brown	U	Blue
G	Green	P	Purple	W	White
K	Pink	R	Red	Y	Yellow
L	Light				